

FabriWare[™] Lit Fabric 4.0

2-Sided, 1-Side Lit Standard Assembly

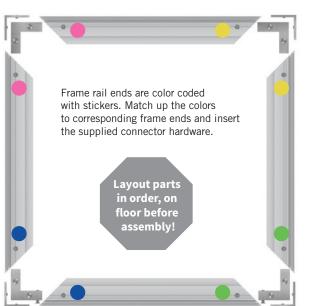



Loosen set screws on all L angle corners so they can become flush. Remove HD corner bracket screws from each of the HD corner brackets with supplied allen wrench—set aside.

HD corner bracket set screws

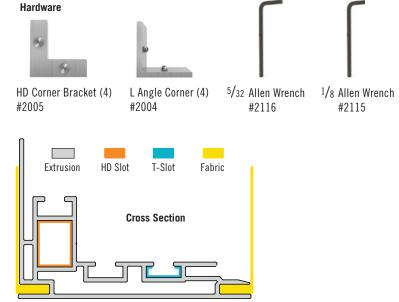

2 Start by assembling one corner of the frame at a time. Insert an **L angle corner** into the rail's **T-slot** (highlighted in blue). Insert an **HD corner bracket** into the rail's **HD slot** (highlighted in orange).

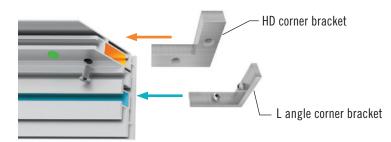

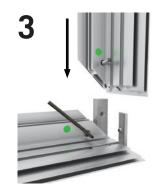

Once in place, tighten **set screws** with allen wrench on **L angle corners**, just enough to catch. Re-insert **HD screws** into the **HD corners** and loosely tighten with allen wrench, just enough to catch. Repeat until all corners of the frame are loosely assembled.


Correct alignment of frame as needed and tighten all hardware screws until frame is secure.

Neither the manufacturer nor any sales agent may be held liable for injury, loss or damage resulting from the use of these products.




FabriWare[™] Lit Fabric 4.0


Large Format 2-Sided, 1-Side Lit Standard Assembly

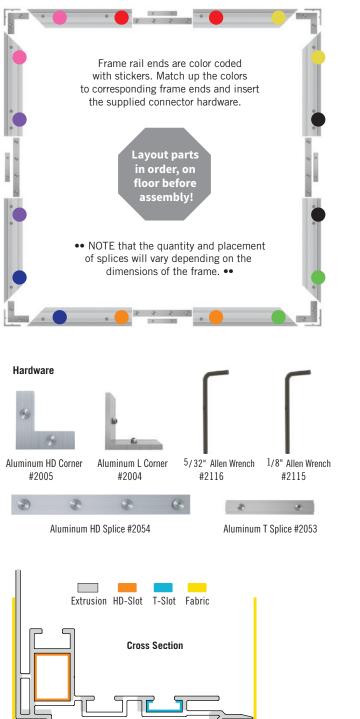

Neither the manufacturer nor any sales agent may be held liable for injury, loss or damage resulting from the use of these products.

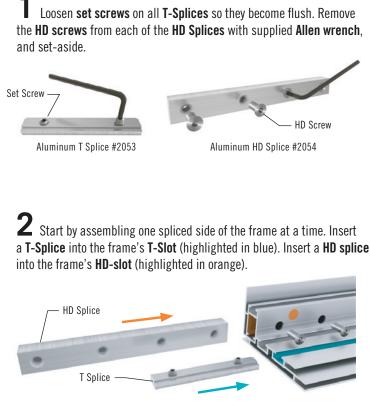

3 Once in place, tighten **set screws** with Allen wrench on **T-Splices** just enough to catch. Re-insert the **HD screws** into the **HD Splice** and loosely tighten with Allen wrench just enough to catch. Repeat until all splices of the frame are loosely assembled.

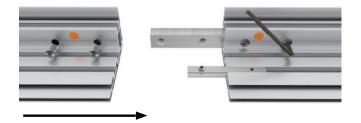



877.518.5156 | 500 Narragansett Park Drive, Pawtucket, RI 02861 www.rosedisplays.com | signware@rosedisplays.com


FabriWare[™] Lit Fabric 4.0

Large Format 2-Sided, 1-Side Lit Standard Assembly Continued

4 Loosen set screws on all L Corners so they become flush. Remove the HD screws from each of the HD Splices with supplied Allen wrench, and set-aside.




5 Assemble one corner of the frame at a time. Insert a L Corner into the frame's T-slot (highlighted in blue). Insert a HD Corner into the frames HD Slot (highlighted in orange).

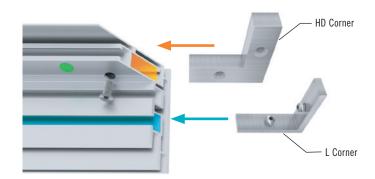

6 Once in place, tighten **set screws** with Allen wrench on **L Corners** just enough to catch. Re-insert **HD screws** into the **HD Corner** and loosely tighten with Allen wrench just enough to catch. Repeat until all corners of the frame are loosely assembled.

Correct alignment of frame as needed and tighten all hardware screws until frame is secure.

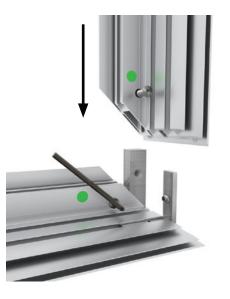

Neither the manufacturer nor any sales agent may be held liable for injury, loss or damage resulting from the use of these products.

held liable for injury, ts.